DIODE LASER SYSTEM OPERATOR'S MANUAL

FDA Approval

CHAPTER 1
Introduction

Chapter Contents: Section Title **No**

.

Use of this Manual..... 1-1

Physician Responsibility..... 1-2

Maintenance..... 1-3

Modification of the System 1-4

Abbreviations and Acronyms 1-5

1.1. Use of this Manual

The AROMA Diode Laser System is designed to meet international safety and performance standards.

Personnel operating the system must have a thorough understanding of the proper operation of the

AROMA diode laser. This manual has been prepared to aid medical and technical personnel to understand

and operate the system. Do not operate the system before reading this manual and gaining a clear

understanding of system operation. If any part of this manual is not clear, please contact your Aroma laser’s

representative for clarification.

Warning

Use of controls or adjustments, or performance of procedures other than those specified herein may put the operator and/or the patient at risk. Therefore, before attempting to use or operate the system, personnel operating the AROMA system should read this manual and become thoroughly familiar with all its safety requirements and operating procedures. The information provided in this manual is not intended to replace the professional

training on the clinical use of the system. Please contact your AROMA laser's representative for current information on available training. For clinical information, refer to the Clinical Guide in this manual, which includes set up guidelines for each application. This manual should always accompany the system and all operating personnel must know its location.

1.2. Physician Responsibility

Federal (USA), EU law restricts the use of this device for sale by or on the order of a physician. The properly licensed practitioner will be responsible for the use and operation of the device and for all operator qualifications. The physician is responsible for contacting his or her local licensing agencies to determine any credential required by law for clinical use and the operation of the device.

1.3. Maintenance

The Aroma system is a precision, technical medical device that requires periodic routine maintenance service, which must be performed by authorized technical personnel. Failure to obtain service voids all warranties expressed and implied. Please contact your local representative for details.

1.4. Modification of the System

Unauthorized modification of the hardware, software or specifications of the Aroma system voids all warranties, expressed and implied. Manufacturer takes no responsibility for the use or operation of such a modified device.

1.5. Abbreviations and Acronyms

℃ Degree(s) Centigrade/Celsius **A** Ampere (s) **AC** Alternating current **CFR** Code of Federal Regulations **cm** Centimeter(s)

CW Continuous wave **Hz** Hertz **IEC** International Electro-technical Commission **J** Joule(s)

J/cm2 Joule(s) per square centimeter **Kg.** Kilogram(s) **LCD** Liquid crystal display **LED** Light emitting diode **M** Meter(s)

Mm Millimeter(s) **Msec** Millisecond **Nm** Nanometers

OD Optical density **Rep Rate** Repetition rate

FHR fast hair removal **HR** hair removal **SR** skin rejuvenation

V Volt(s) **VAC** Volt(s) AC **W** Watt(s)

CHAPTER 2

Safety

Chapter Contents: Section Title No

Introduction 2-1

System Safety Measures 2-2

The Treatment Room 2-3

General Precautions and Cautions 2-4

Warnings Related to Laser Emission..... 2-5

System Safety Features..... 2-6

2.1. Introduction

This chapter describes general safety issues regarding the use of the Aroma Diode Laser System, with special emphasis on optical and electrical safety.

Warning

Hazardous voltages are energized when the emergency stop button is engaged.

Note

Federal (USA) and EU law restricts this device to sale by, or on the order of a physician or any practitioner licensed by the law of the state in which he or she practices or intends to use or order the use of the device.

The Aroma is a diode laser system operating at a wavelength of 810 nm. The system has been specially designed to minimize accidental exposure to hazardous radiation.

With proper operation and maintenance, trained and qualified medical practitioners can use the system safely. The supervising physician and all other personnel operating or maintaining the Aroma system must be familiar

with the safety information provided in this chapter.

The primary consideration should be for the safety of the patient, the physician and other personnel. Patient safety is mainly assured with a well trained staff and a well laid out treatment room. Patient education is also important, including information about the nature of the treatment.

2.2. System Safety Measures

The Aroma system was designed to maximize safety for both patient and personnel. The following are some of the Aroma's preventive safety measures:

2.2.1. Electrical Safety

1.

A semi-automatic circuit breaker, located on the service panel, protects the system by tripping when power overload occurs. To resume normal operation, lift the circuit breaker handle and restart the system.

2.

Software protection, including: The software checks all safety related hardware after the system is switched on.

Emission timing is regulated by interrupts every 1 msec.

A watchdog cycle continuously monitors operation of the system during treatment.

If an error occurs, the system displays a warning message to the operator and disables further operation.

3.

A self-test of the attached hand-piece is performed when the system is turned on. The test includes hand-piece identification.

4.

A self-test of the electrical circuitry takes place after the system is turned on.

The test circuits continuously monitor system operation during treatment.

2.2.2. Laser Safety

1.

Closed light-guide geometry is used to transmit light to the treatment site. Light is emitted only through the front plane of the light-guide.

2.

The system incorporates a safety remote interlock connector for connecting an external interlock on the entrance door to the treatment room. The external remote interlock is serially connected with the footswitch; therefore when installed, disables the system and prevents operation when the entrance door is opened.

3.

An emergency shutoff knob expedites shutdown when necessary. When pressed, it immediately shuts down system operation.

4.

A password on the service screen prevents unauthorized changes to the system's basic operating parameters.

5.

Laser emission (from the laser hand-pieces) is enabled only if both the footswitch and the hand-piece trigger are pressed at the same time. The trigger

reduces the risk of unintentional laser emission.

6.

Water is circulated through the hand-piece as soon as the system is turned on in order to cool the laser source.

7.

The flow and temperature of the water are monitored in order to eliminate the risk of hand-piece overheating. Laser beam emission is not permitted if the water flow stops or if the water temperature is equal to or higher than 40℃(104F)

8.

The system is equipped with a pneumatic footswitch for ease of use. It is pneumatic to eliminate the possibility of any short-circuiting in the footswitch's wiring and to increase its durability to fluids.

Warning

Any laser emitting device can cause injury if used improperly. High voltages are present inside the Aroma system. Personnel who work with lasers must always be aware of the possible dangers and must take the proper safeguards as described in this manual.

2.3.The Treatment Room

The treatment room must be clearly labeled with signs indicating that high intensity laser energy is in use. The treatment room sign that is supplied with the Aroma Diode laser system is shown in Figure as below

The treatment room should not include any light reflecting objects such as a mirror. Access to the Aroma treatment room should be allowed only to personnel essential to the procedure and who are well trained in the required safety procedures.

Assure that all of the treatment room personnel are familiar with the Aroma laser system controls and know how to shut down the system instantly.

2.4. General Precautions and Cautions

The following precautions, cautions and warnings must be observed for the safe use of the Aroma Diode Laser system.

2.4.1. Precautions

Physicians and clinicians should read this manual thoroughly before attempting to operate the Aroma system.
Any hand-piece's light-guide must be kept clean at all times. Remember to clean the cooling gel from the light-guides after each patient.
The system weighs approximately 50 kg and may cause injury if proper care is not used when moving it. The system is well balanced and is designed to be moved, but should always be moved carefully and slowly**. Never pull the system by the hand-piece.**

2.4.2. Cautions

Only authorized personnel may service the Aroma laser system.
This includes making internal adjustments to the power supply, cooling system, optics, hand-pieces, etc.
Verify that the Aroma is wired for the appropriate electrical voltage of your country (110 VAC or 230 VAC).
Maintenance performed by the operator must only take place when the system is shut down and disconnected from the electrical power source. Performing maintenance procedures with the system powered-up can be hazardous to the operator and/or destructive to the system.

*** Always turn off the system when it is not in use.**

*** Never leave the system in Ready mode unattended**.

*** Never allow untrained personnel to operate the system.**

*** Never press the footswitch & hand-piece trigger unless the hand-piece is safely oriented at a specific and intended target.**

*** Never leave the system turned on, open or unattended during system maintenance.**

2.5. Warnings Related to Laser Emission

2.5.1. Burn Hazards

The Aroma radiation has the wavelength of 810 nm, which is invisible to the human eye and can cause third degree burns.

2.5.2. Direct and Reflected Eye Exposure Hazards

It is essential that all people present in the treatment room during the treatment (patient and medical personnel) protect their eyes by wearing recommended protective eyewear.

It is good practice to instruct the patient to close their eyes during treatment even when wearing protective eye glasses.

If the patient cannot wear the protective eyewear, fit the patient with opaque eye protection that completely blocks light from the eyes.

If the treatment area is very close to the eyes (e.g. eyelids), protect the eyes with corneal shields.

Warning

Diode laser radiation can cause serious eye damage or blindness. For maximum safety, the patient must wear metal eye goggles for all facial treatments.

2.5.3. Safety Eyewear

Diode laser radiation is hazardous to the human eye. All personnel must use safety eyewear and must ascertain that the eyewear provides adequate protection (OD>5) at 810nm radiation. Safety glasses and opaque eye protectors are supplied with the system, and more can be ordered from your Aroma laser representative.

2.5.4. Explosion and Fire Hazards

The absorption of optical energy raises the temperature of the absorbing material.

Take precautions to reduce the risk of igniting combustible materials in and around the treatment area.

The system is not suitable for use in the presence of flammable mixtures with air or oxygen.

Do not operate in the presence of volatile solvents such as alcohol, gasoline or other Solvents

. Do not use any flammable substances such as alcohol or acetone in the preparation of the skin for treatment. If necessary, use soap and water to clean before treatment.

If alcohol is used to clean and disinfect any part of the Aroma system, allow it to dry thoroughly before operating the system.

Flammable materials must be kept at a safe distance from the system.

2.5.5. High Voltage Hazards

The system utilizes 110/230 VAC. To avoid personnel injury, do not operate the system before ensuring that the exterior panels are properly closed. Do not attempt to remove or disassemble the exterior panels.

The Aroma system produces very high voltages in various components. Some components may retain a charge after the power supply has been turned off, so no part of the exterior housing should be removed, except by authorized personnel.

Whenever system maintenance is performed, never leave the Aroma laser system turned on, open or unattended.

2.5.6. Grounding the System

The system is grounded through the grounding conductor in the power cord and internal grounding pin.

2.6. System Safety Features

The Aroma laser system is equipped with a number of safety features. All treatment room personnel should be familiar with the location and operation of these safety features.

2.6.1. Emergency Shut-Off Knob

This red knob is used for emergency shutdown. When pressed, it immediately shuts off power to the entire system.

To release the emergency shut-off knob, turn it clockwise. Otherwise, the system will remain off.

Caution

Use the emergency shut-off knob only in the event of an emergency.

2.6.2. Remote Interlock Connector

The system incorporates a safety remote interlock connector that should be connected to an external micro-switch on the entrance door to the treatment room.

The external remote interlock is serially connected with the footswitch; therefore when installed, it disables the system and prevents operation when the entrance door is opened.

2.6.3. Double-Tiered Security for Laser Emission

Laser beam emission is enabled only when the operator presses hand-piece trigger; therefore accidental lasing may only occur due to double error condition (minimum risk).

2.6.4. Tissue Cooling System

The hand-piece tip is cooled by a thermoelectric cooling method to reduce patient discomfort during treatment and to reduce post-procedure side effects, such as local skin redness and swelling. The tissue is cooled through a metallic ring and a cold sapphire window. The tip's temperature is reduced to 2-5℃(in average 3℃) during system operation.

A cooling sensor and monitors keep the temperature at this level to prevent over-cooling of the treated area. The tissue cooling system is designed to cease operation in case of a pause in operation lasting for more than 5 minutes. This feature is included to prevent undesired condensation of water drops on the tip. To reactivate the tissue cooling system, the hand0piece trigger must be activated

In addition to the integrated contact cooling, the Aroma hand0piece is equipped with an adapter that is designed to connect a big capacity of chiller Cryo 5 to further enhance the cooling capabilities.

2.6.5. Hand-piece Design

Several aspects of the hand-piece design contribute to the safety of the Aroma system:

Since the laser beam is generated in the hand-piece itself and not in the console (as in conventional lasers), there is no need for an articulated arm or other beam delivery system with inherent beam quality and alignment concerns. Instead, Aroma hand-piece has a one-piece light mixer that combines the emission from thousands of emitters to produce a uniform square beam. Since

laser emission is confined to the hand-piece, there is no hazardous optical radiation in the console or the umbilical cable.

The sapphire tip is placed against the patient's skin during the system use, reducing stray light while increasing the therapeutic effect.

CHAPTER 3
Installation

Chapter Contents : Section Title Page.

Introduction 3-1

Equipment List 3-2

Facility Requirements 3-3

Hand-piece Connection..... 3-4

Remote Interlock Connection 3-5

Filling the Coolant Reservoir..... 3-6

Moving the System..... 3-7

3.1. Introduction

The Aroma Diode Laser System is designed for installation in an office or a clinic and requires minimal site preparation. When the Aroma system is purchased, complete on-site installation, including initial system testing and calibration, is included.

System transportation and installation is carried out by authorized technical personnel, who will do the following:

* Unpack the system and position it in its pre-selected location
* Verify the integrity of the system and its components
* Connect system components (hand-pieces, footswitch, interlock connector)
* Plug the system into a designated electrical outlet
* Fill the cooling system reservoir with de-ionized water
* Test the system for proper calibration and functional operation of all components and software
* Coordinate the performance of an on-site safety inspection, if required

Note

Any damage to the packaging or to the system found prior to opening the package should be reported to your Aroma laser representative and to the insurance carrier.

3.2. Equipment List

The Aroma diode laser platform includes the following:

*** Aroma diode laser laser system console**

*** Hand-piece**

*** Set of keys**

*** Remote interlock connector**

*** Laser protective glasses**

*** Opaque eye protectors**

*** Operator's manual**

*** Laser radiation danger sign**

*** Hand piece line hanger**

3.3. Facility Requirements

Before unpacking the system, ensure that the site meets the requirements described in the following sections.

3.3.1. Space and Positioning

Space should be allocated with adequate ventilation and free airflow.

The working area for the system should be prepared according to the system

dimensions presented in Figure

35 cm (14")W x 40 CM (16")L

3-1. In order to guarantee proper ventilation, always keep the sides of the system at least 20" (0.5m) from the wall or from other obstructions to

air flow. After positioning the system, lock the breaks on the front wheels by pressing the pedals on top of each wheel.

3.3.2. Electrical Requirements

The system is factory pre-wired for the local line voltage, as ordered by the customer. Accordingly, the system

will require a separate line supply of: 120 VAC 10%, 20A, 50/60 Hz, single phase, ***Or:***
230 VAC 10%, 10A, 50/60 Hz, single phase

Input power lines should be free of transients, voltage and current spikes, sags and surges. Consequently, the system power line should not be shared with other heavy variable loads such as elevators, air conditioning systems, large motors, etc.

The system is grounded through the grounding conductor in the power cable that is plugged into the wall power outlet. Good grounding is essential for safe operation.

Caution

Verify that the Aroma system is wired for the appropriate line voltage of your country (120 or 230VAC).

The system should be connected to a separate power line with separate circuit breakers. Infini Esthemed cannot guarantee adequate performance unless the system is connected to a dedicated circuit.

3.3.3. Environmental Requirements

Air Quality:

The system should operate in a non-corrosive atmosphere. Corrosive materials such as acids can damage electrical wiring, electronic components and the surfaces of optical components.

Air-borne dust particles should be kept to a minimum. Dust particles absorb light and heat up. Hot particles located on the optical lenses can damage them. Metallic dust is destructive to electrical equipment.

Water Quality:

The system should be operated using de-ionized water only. Regular tap water contains sediments that may damage the cooling system.

Temperature:

To ensure that the system performs optimally, maintain the following temperature
and relative humidity levels:

Operating Temperatures: 10℃ ~ 25℃ (50F~77F)

Storage Temperatures: 10℃ ~ 55℃ (50F~131F)

Operating Relative Humidity: up to 80%

Storage Relative Humidity: up to 90%

Note

When the system is used intensively it emits heat. Therefore, it is recommended to install air conditioning in the room in which the system will be used.

3.4. Hand-piece Connection

The hand-piece connector is equipped with a protective, short-circuiting plug that should always be in place

It is designed to enable easy replacement of the hand-piece when required. The hand-piece connection port is located in the system's back panel and two pins secure the hand-piece connector. For insertion and removal of the connector, the both left and right buttons must be pressed at the same time to release connection port.

<Hand-piece connector socket>

<Inside of Hand-piece>

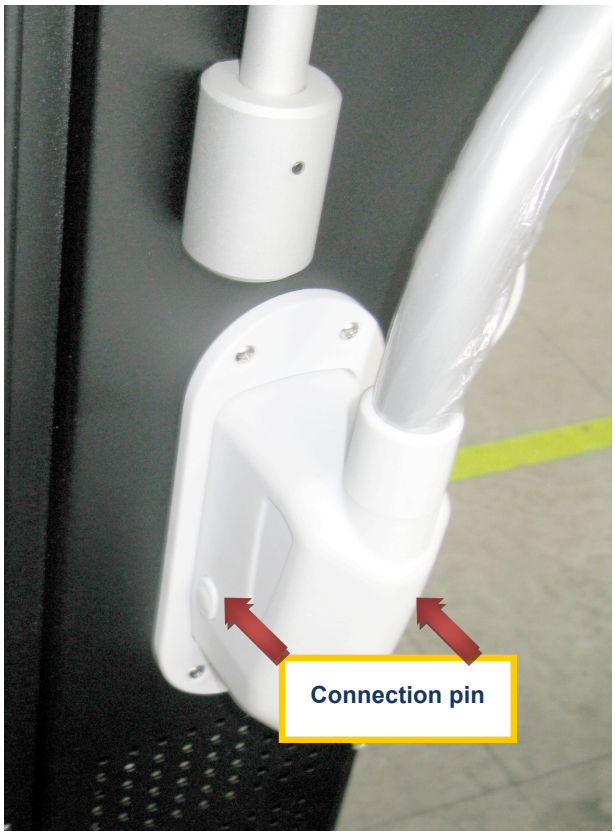

3.5. Remote Interlock Connection

The Aroma system is equipped with a remote interlock connector to provide maximum safety. The connector is situated on the service panel.

An external switch should be connected to this connector to create a remote interlock system. This switch should be mounted on the entrance door, so that if the door opens the switch contacts also open and disable system operation.

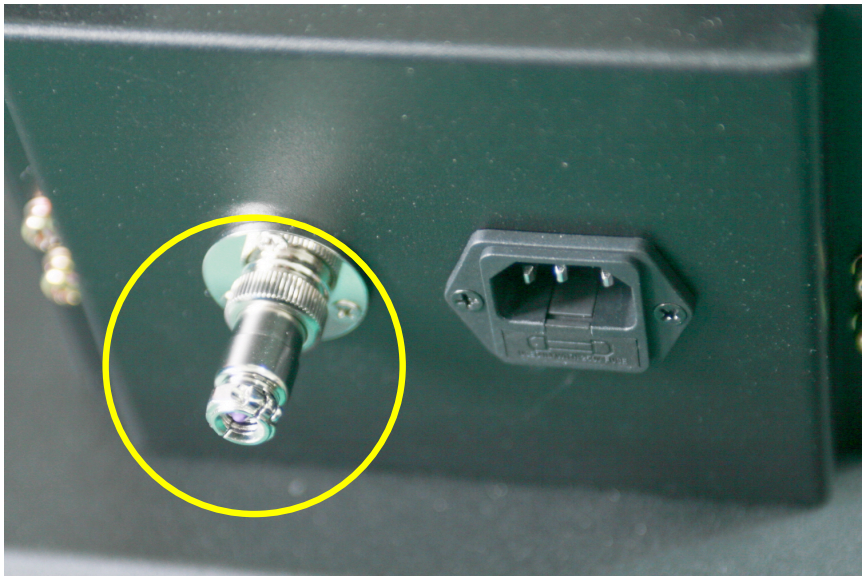

To connect the remote interlock:

1.Turn the system off.

2.Remove the connector from the port on the system rear panel.

3.Open the connector cover.

4.Solder the two wires from the door switch to pins 1 & 2 (short-circuited on delivery with a white wire).

5.Close the connector cover.

6.Reconnect to the port on the service panel.

7.Turn the system on.

3.6. Filling the Coolant Reservoir

The cooling system's reservoir must be filled with de-ionized water. It is imperative that the level of the water in the reservoir be checked every three months and de-ionized water added if necessary.

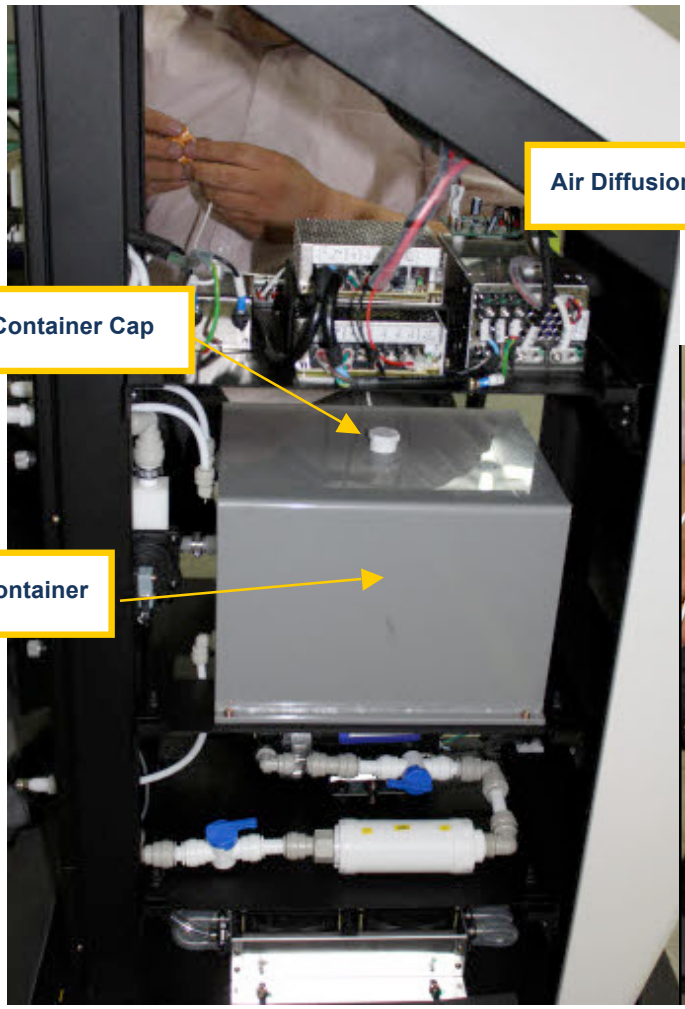

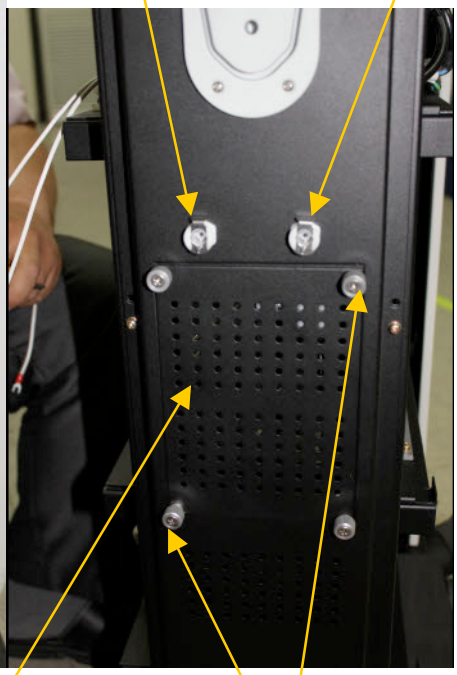

Air Diffusion Nipple

Water Infusion Nipple

Water Container Cap

Water Container

Back panel for Water exchange

Water Exchange Back panel Screw

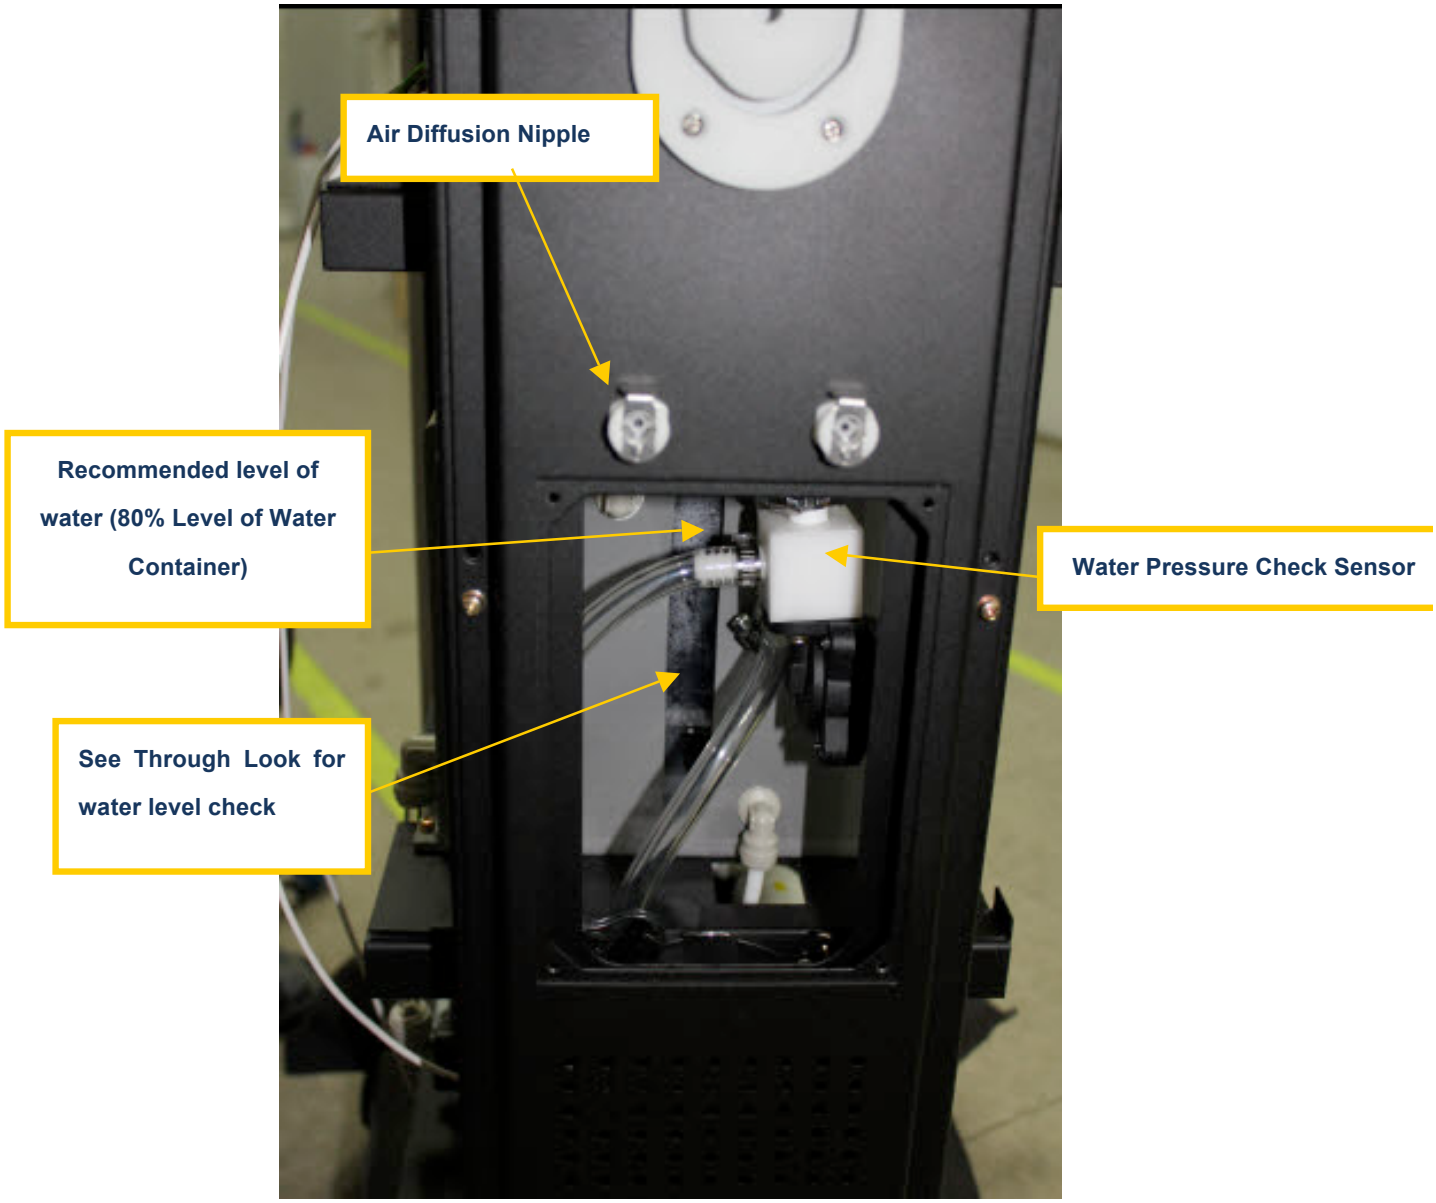
Air Diffusion Nipple
Recommended level of water (80% Level of Water Container)
Water Pressure Check Sensor
See Through Look for water level check

1) Open metallic back panel with hand
2) Insert a hose into the Air diffusion Nipple for air to come out from the water container.
3) Check the level of water in water container
4) Connect a hose into water-infusion nipple to pore of water
5) Infuse distilled water or de-ionized water to the extent of 80% of container
6) Eliminate a hose which inserted into Air-Diffusion Nipple
7) Close metallic panel in back side of console
8) This changing de-ionized water is recommended to do in every 12 months.

3.7. Moving the System

To move the system within the clinic, do the following:

1.Seat the hand-piece in its holder.

2.Disconnect the power cable.

3.Release the wheel breaks.

4.Slowly push or pull the system using the handle.

Caution

Never use the hand-piece or umbilical cable to move the system.

If the system is to be moved to another facility, consult your Aroma Laser service representative.

CHAPTER 4
Operating Instructions

Chapter Contents: Section Title **Page**

Introduction 4-1

Error Detection 4-2

Preparing the System for Operation 4-3

Operating the System..... 4-4

4.1. Introduction

This chapter describes in detail the operating instructions for the Aroma Diode Laser System.

Caution

This system may only be operated by a licensed practitioner, according to the local laws in every country.

A laser radiation danger sign, supplied with this system , should be placed at the entrance to the treatment room whenever the system is in use.

Improper **use or adjustment of this system may invalidate the Aroma laser system's service warranty agreement.** Please contact your authorized distributor before attempting to use the system in any manner other than those specified in this manual.

4.2. Error Detection

This system is equipped with self-testing software that continuously monitors system operation by means of watchdog software & circuitry, and by interrupts. The software continuously checks the hardware for any error condition:

The LCD displays an error message and disables further operation. The audible indicator sounds an alarm signal which is longer than the normal

light or laser emission signals.

In such a case you should shut the system down and restart it. If the problem still persists, refer to **Troubleshooting** in Service Manual for further instructions.

1) Wrong hand-piece Connection

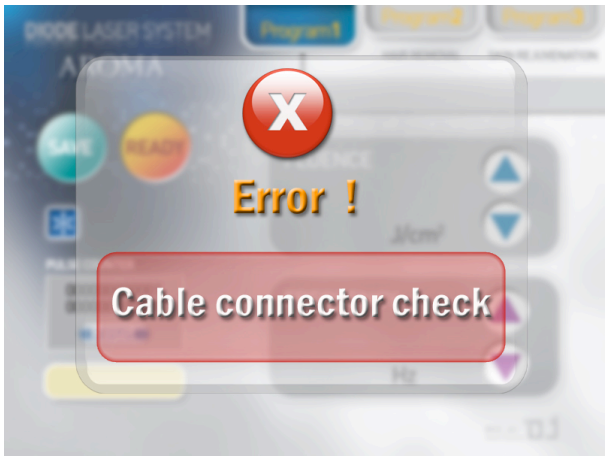

Above Error message is shown when the hand-piece is not connected in right way. Once hand-piece is reconnected again in right way, it will disappear automatically.

2)Interlock Error

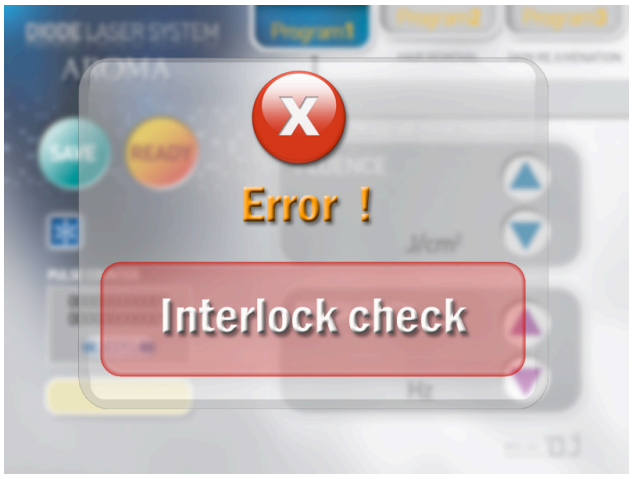

When remote interlock is not connected with console, this message is shown.

3)Cooling system error caused by low water flow or air in hand-piece

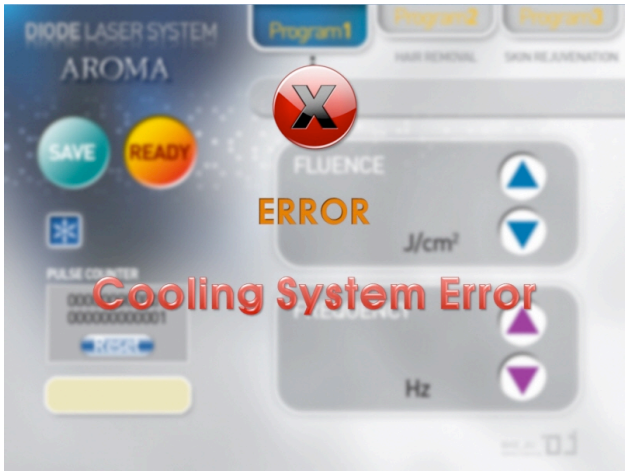

When water flow is not normal for cooling system, this message is automatically shown on LED screen. Once the water flow and water pressure is return to normal condition, it will be disappeared.

4.3. Preparing the System for Operation

1. Plug the system into the mains power outlet.

2. Insert the key into the key switch.

3. Connect the remote interlock to the treatment room's entrance door, if required

4. The patient and all personnel in the room should wear safety eyewear specific to the hand-piece in use .

5. Lift up the circuit breaker to the upper position.

4.4. Operating the System

To operate the system:

1. Turn on the system (refer to below figure)

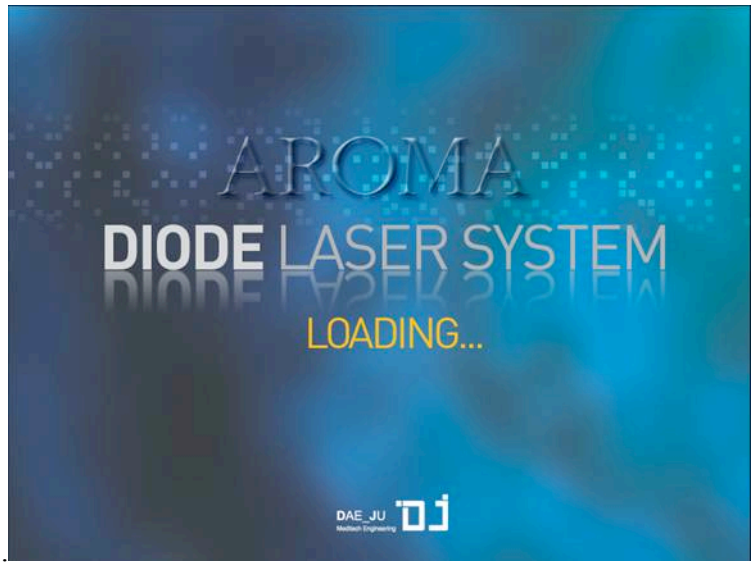

2. Loading screen shows up automatically as above figure.

3. Set the operating parameters (refer to below figure)

3-1. Select mode among Fast Hair Removal, Hair Removal, Skin Rejuvenation

3-2. Adjust Jouls and Herz

4. Press **STBY** button on LCD screen to reach a **Ready** position.

5. Activate the hand-piece trigger to initiate laser emission

Warning

The Aroma diode laser system emits intense laser pulses through hand-piece. Make sure that all personnel are protected against accidental exposure to these pulses, either directly from the hand-piece or indirectly from a reflecting surface.

To protect against eye damage and discomfort, make sure that everyone present in the room is wearing recommended protective eyewear.

*** Never look directly at the pulse coming from the hand-piece, even when wearing appropriate protective eyewear.**

*** Never point the hand-piece so that it discharges into free space**.

*** Make sure that the hand-piece is pointed at the treatment site during actual treatment.**

CHAPTER 5

System Description

Chapter Contents: Section Title Page

Introduction 5-1

General System Description 5-2

LCD System Controls 5-3

Application Modes 5-4

System Specifications 5-5

Clinical Data……..... 5-6

5.1. Introduction

This chapter provides a detailed description of the Aroma Diode Laser System. The description covers the system's main components, controls and functional sub-systems and system & hand-piece specifications.

5.2. General System Description

5.2.1. Diode Laser Hand-piece

Caution

The hand-piece contains delicate optical components which may suffer severe damage if dropped. Except during treatment, the hand-piece should be kept in its cradle at all times

The diode laser hand-piece is shown in Figure as below. It incorporates the laser diode array with the light guide, the protective sapphire window, the cold plate, the hand-piece trigger (housed in the handle).

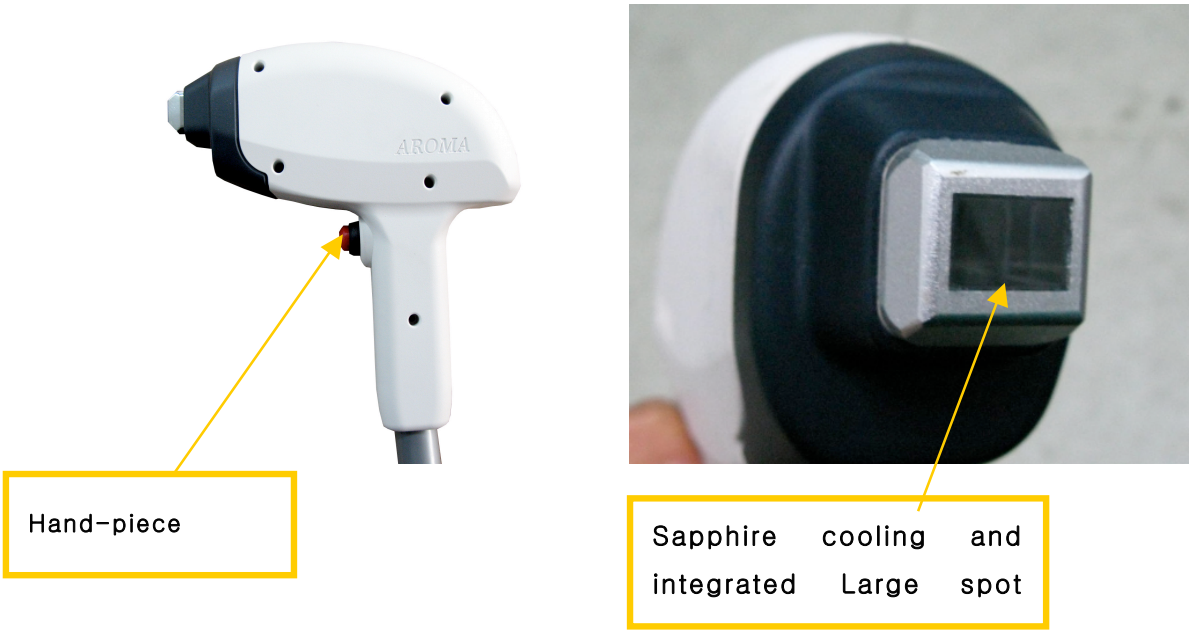

-

5.2.2. Hard -Ware System Components

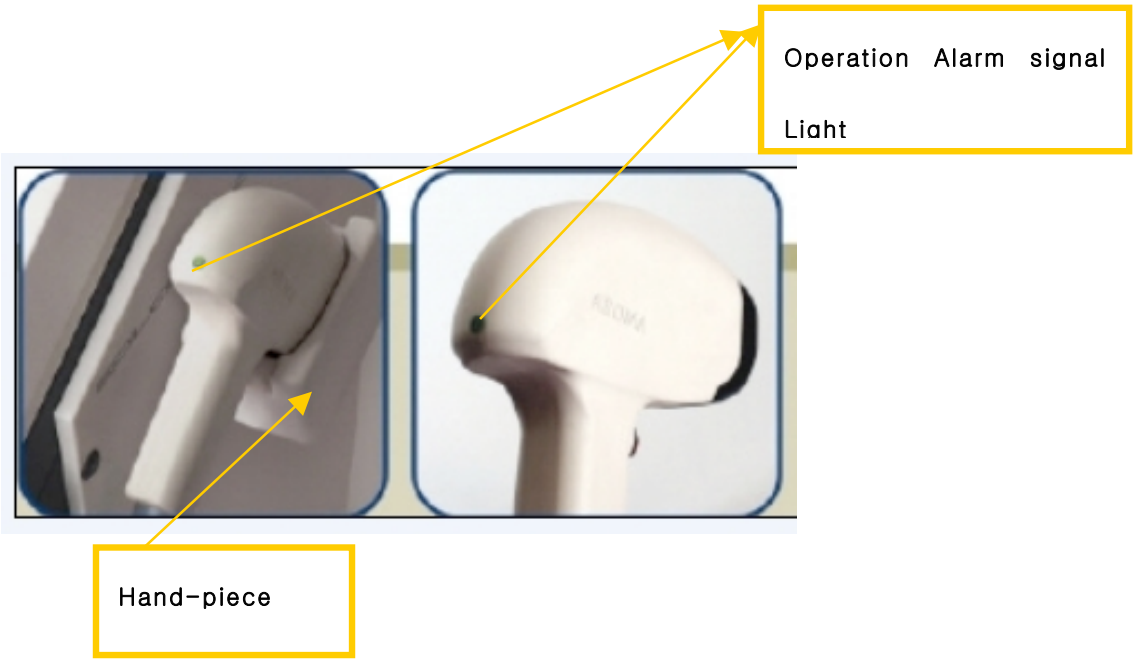

5.3. LED Screen Controls

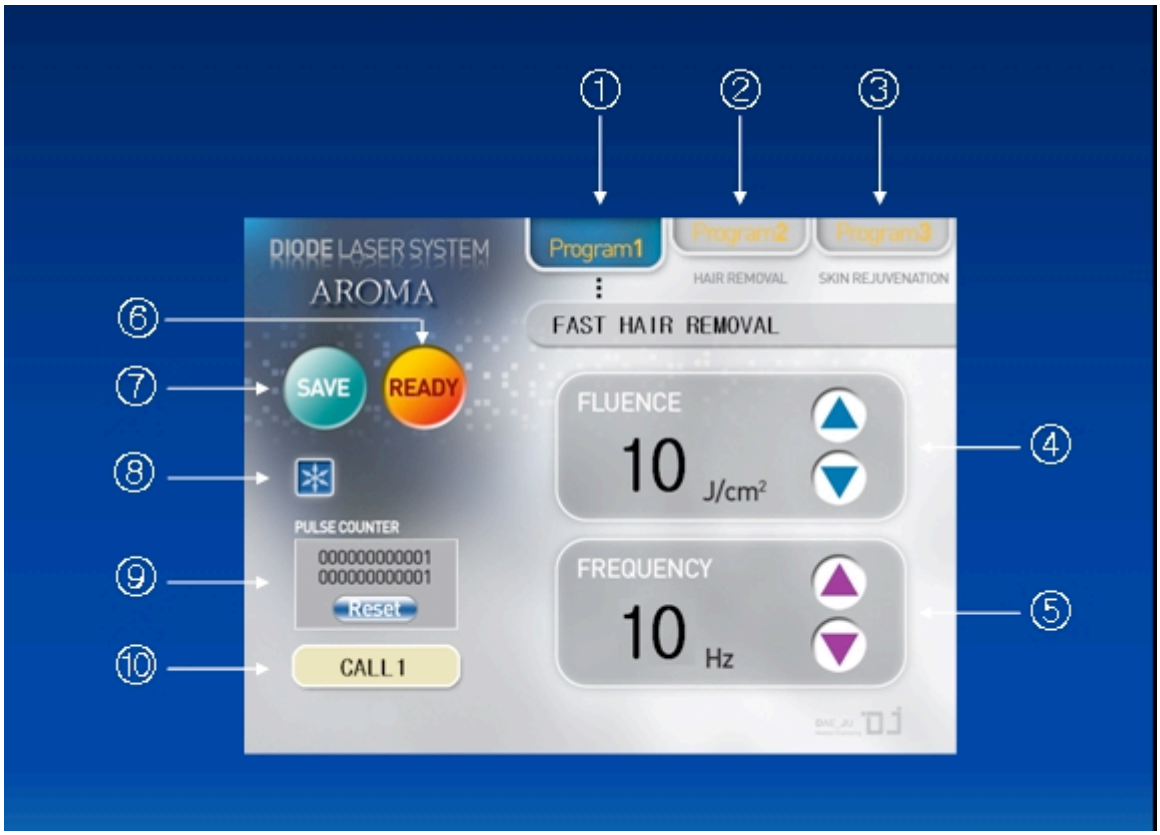

Aroma has adopted LED touch panel as an operating controls, and are composed of by above buttons.

1) Program 1: Fast Hair Removal – In this stage, the energy goes up to 110J/cm2 with up to 10Hz.
2) Program 2: Hair Removal – In this stage, the energy goes up to 110J/cm2 with up to 3 Hz. Herz are automatically set in accordance with energy.
3) Program 3: Skin Rejuvenation – In this stage, the energy goes up to 110J/cm2 with up to 10Hz.

4) It shows Energy level and adjustable up to 110 J/Cm2

5) Frequency can be adjustable up to 10Hz

6) Stan By and Ready button: By activating of READY button, laser can be emitted by pulling trigger.

7) Save: this function makes for user to save the previous data which set by user. Total 5 data can be memorized.

8) Snow Signal in blue means “Cooling System is in activation”, where as snow signal in brown means “Cooling System is not working, since it is already enough to be cold to operate”.

9) Pulse Counter: Upper line of number shows “the total number of shots after turning on the machine”. But the bottom line of number shows “ the total accumulated of shot number so far”

10) Calling function makes user to recollect memorized data. Total 5 data can be recollected.

5.4. Application Modes

The Aroma Diode Laser system emits a train of optical pulses as long as the hand-piece trigger are activated. The train frequency is the selected repetition rate (**Rep Rate**). The pulse fluence can be set by the operator for different tissue effects. The system's application modes (**FHR**, **HR** and **SR**) automatically selects the appropriate pulse duration for the selected fluence. The user may select the pulse repetition rate within the limitations that are dictated by the software.

5.4.1. Mode Description

The Aroma Diode Laser System has three operating modes: **FHR**, **HR** and **SR**

1. The FHR Mode provides the ideal combination for efficient hair removal:

The FHR mode uses the optimal hair removal wavelength of 810nm diode for deep penetration into the dermis where the hair follicle is located.

The FHR mode has consistent, high average power capabilities to enable the10 pulse-per-second repetition rate for "hair removal in-motion".

This mode enables a low fluence, "in-motion" approach for virtually painless hair removal.

2. HR Mode (Hair Removal)

The Aroma Diode Laser also includes the traditional higher fluence HR (Hair Removal) mode. Aroma can be used safely on all skin types, including tanned skin, and has been shown to provide long-term hair reduction.

3. SR Mode (Skin Rejuvenation) provides the combination for efficient skin rejuvenation.

SR Mode gives an instant firming up and tightening in treated area, and can last longer as it treated again and again.

5.4.2. User-Selectable Operating Parameters

The user may control system operation by setting values for the following parameters:

1.Application Mode

2.Fluence

3.Repetition Rate

5.4.3. Save and Call Option

To facilitate setting the operating parameters, the Aroma system allows the user to save and call 5 different parameters. Upon turn-on, the system loads the default (last saved) set of parameters.

.

Caution

Saving the settings overwrites the current defaults or last-saved parameters.

5.4.4.Pause in Operation

As a standard safety measure, whenever laser emission is not immediately required, the system should be set to **Standby** mode. If the operator leaves the room, the system should be turned off.

Note

To stop laser emission, release the hand-piece trigger.

5.5. System Specifications

*** Laser Type** CW GaA1As diode laser array with convergence lens

*** Wavelength** 810nm

*** Energy** up to 110 J / cm

*** Application Modes** **FHR** mode single pulse type

HR mode 6 pulse types:

SR mode single pulse type

*** Pulse Repetition Rate** **FHR** mode 1 ~ 10 Hz

HR mode 1 ~ 3 Hz

SR mode 1 ~ 10 Hz

*** Pulse Width** 3.3ms ~ 450ms

*** Spot Size** 14mm x 10mm

*** Cooling** Semiconductor / 2-5℃ (3℃ in average)

*** Dimension** 350mm x 400mm x 1,100mm

*** Weight** 60Kg

5.6. Clinical Data

Before
1 Month After 1 Tx

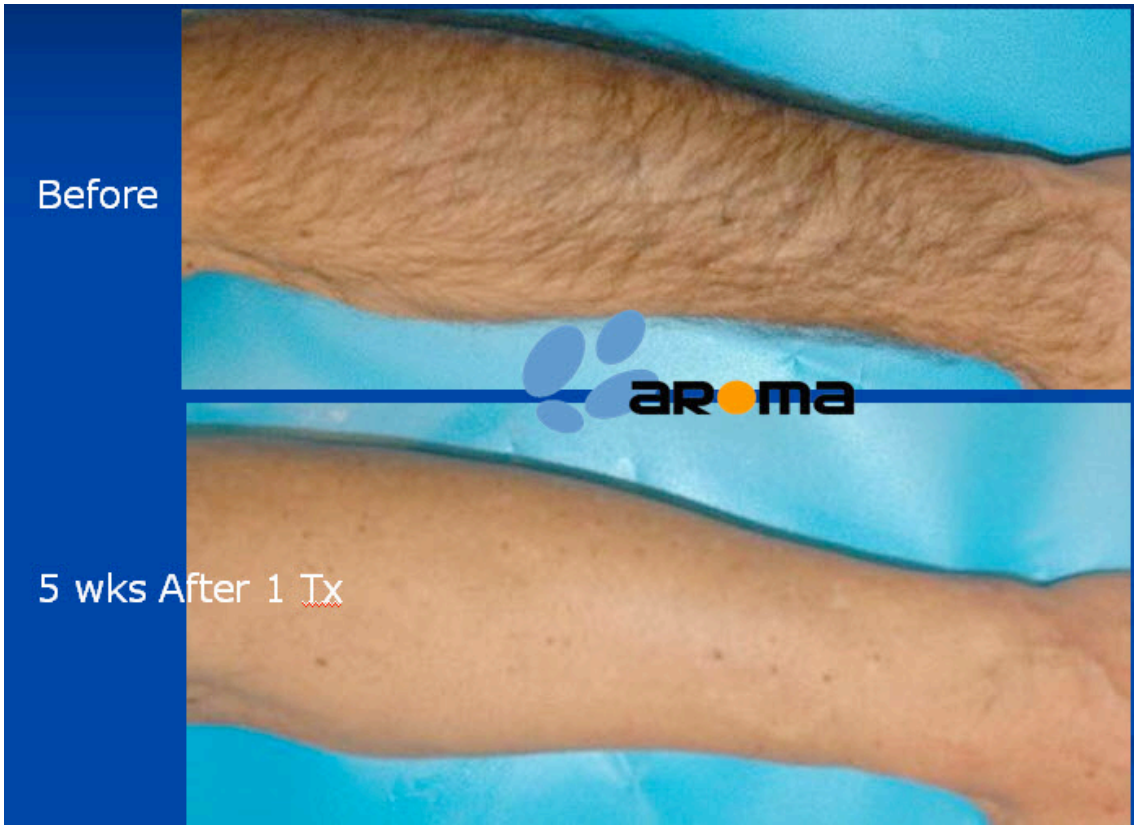
Before
5 wks After 1 Tx

Before
aroma
5 wks After 1 Tx

Nov 21st, 2006
Mar 29th, 2007
aroma
Before
3 wks After 4 Tx

>>END>>>>>>>>>>>>>>>>>>>>>>>>>>>>

No part of this manual may be reproduced or copied in any form by any means - graphic, electronic or mechanical, including photocopying, typing, or information retrieval systems - without written permission of Infini Esthemed.

System specifications and the information contained in this document are subject to change without notice